1D Wireless Laser

Barcode Scanner

User Manual

Version

Power off (Note, After scan this barcode there

off status)

will be a long beep ,then scanner goes to power

Introduction

This is a simple user's guide, please contact local distributor for more support and details.



Factory Default



Forced pairing

Pair Instruction:

Step 1: Scan "Factory Default"



Step 2: Connect Data receiver to host device.

Step 3: Scan "Forced pairing "during the data receiver led indicator flashing, there will be two beeps after succeed pair



3 Optional Wireless Mode



Inventory





Automatic storage (default)

Remark:

- 1) Normal Mode: the data will be uploaded to host device immediately after scan, out of range it will not save the data, and there will be 2 alarm beeps out of range;
- 2) Inventory Mode: the data will be saved in the memory chip, and upload data to host device as instructed:
- Eg: scan the "upload all data and clear", the scanner will upload all data saved in the memory chip and cleared the original data:
- 3) Automatic storage Mode: the data will be uploaded to host device immediately after scan if the scanner in range, the data will saved in the memory chip if the scanner out of range which will heard 2 alarm beeps, press the scanner trigger to upload the saved data after back to range, and the original data in the memory chip will be cleared.

Data Upload Instruction in Inventory Mode



Upload all data and clear (Note: Upload all stored data and clear them)



(Note: upload all stored data and do not clear the data)



Upload one data and delete



Upload one data But not delete



Display all data



Data delete

Scan Mode



Manual (Default)



Continuous



Auto-Flashing

Auto-sense Mode





Image Inverted



Reverse

Buzzer







